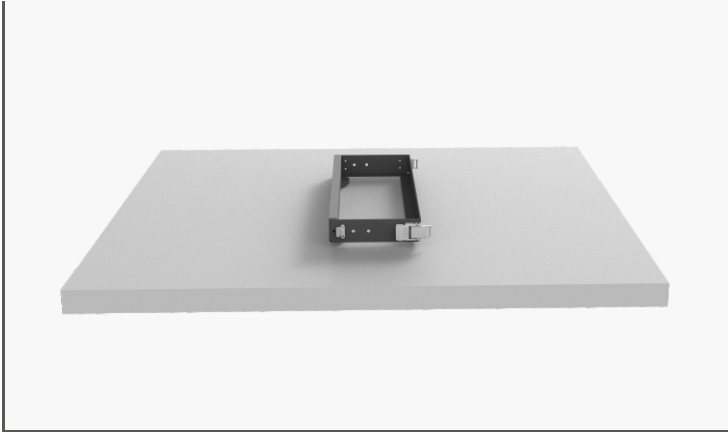


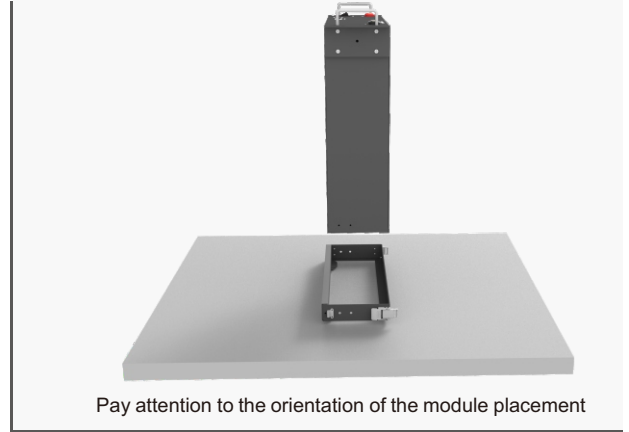
Installation Guide for NESR48100 module rack

1 Installation rear rack

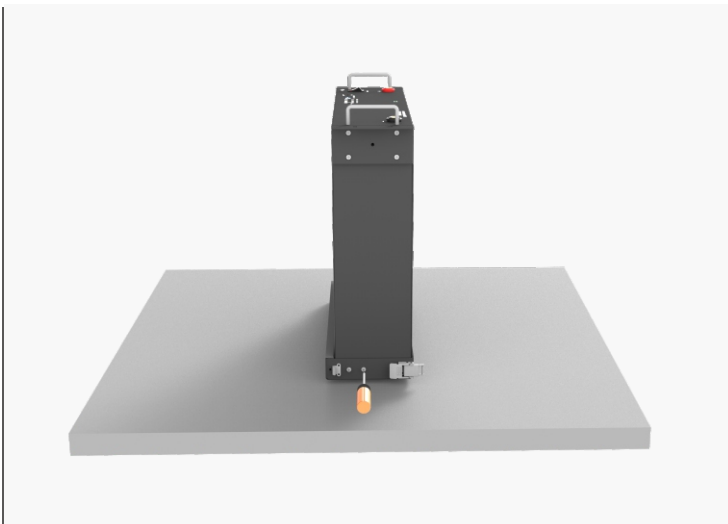
A Place the rear rack on the ground



B Installing battery into the rear rack



C Fix with M4 bolts



D Tighten screws

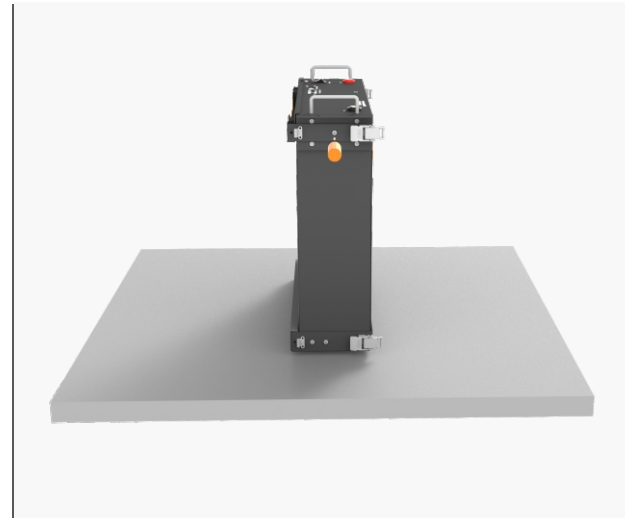


2 Installation front rack

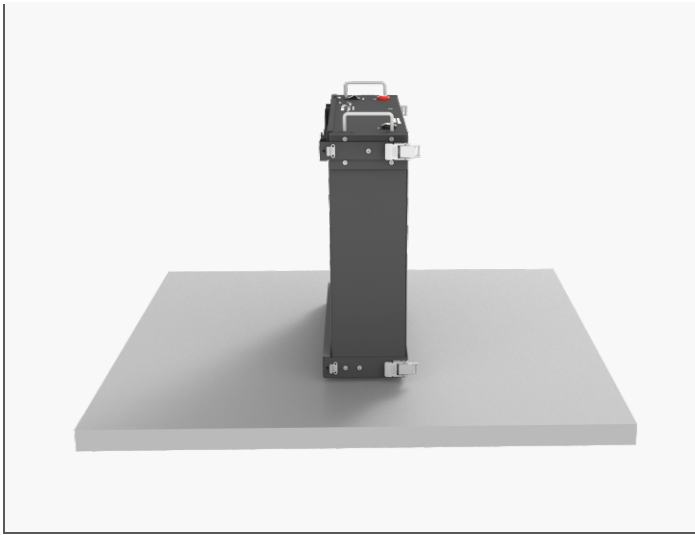
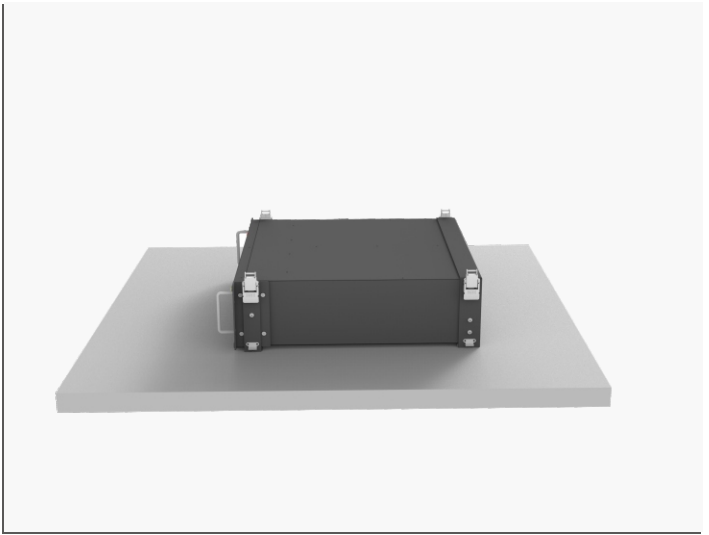
A Installing the front rack into module



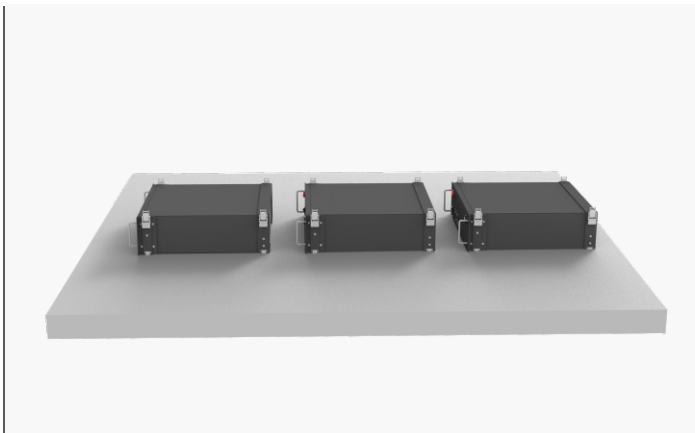
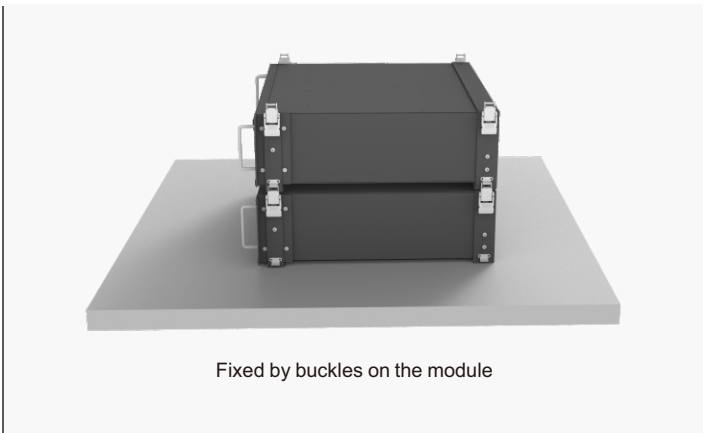
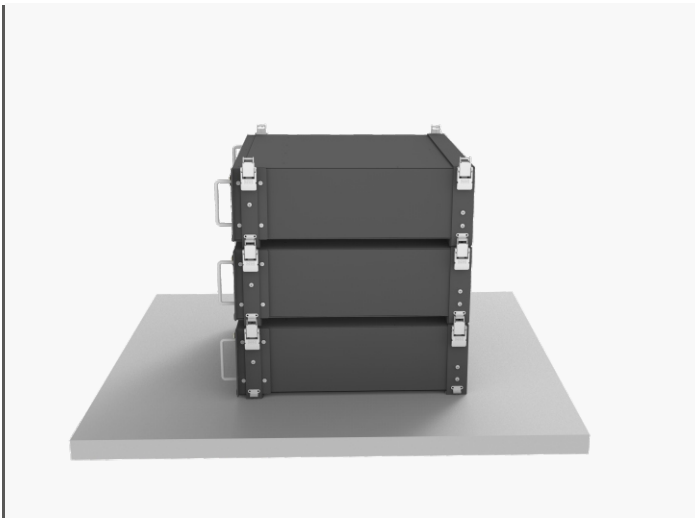
B Fixing with M4 bolts



Installation Guide for NESR48100 module rack

C Tighten screws**D** Lying flat module

3 Installation front rack

A Installation all module racks**B** Module stacking**C** Finished all module stacking**Narada 南都®**

NARADA POWER SOURCE CO., LTD.

Tel: +86-571-56975980

E-mail: intl@narada.bizWebsite: en.naradapower.com
www.naradapower.com

Building A, No. 822, Wenôer West Road, Hangzhou, Zhejiang, China

Due to product and technical improvement,
the installation mode is subject to change without notice,
and Narada has the final right of interpretation